


Directional airflow hood instructions

When using Hextio in a room larger than 20sq m, the directional airflow hood can be used to direct the airflow towards the user.




To remove, pull firmly from one side of the hood, do not pull from front

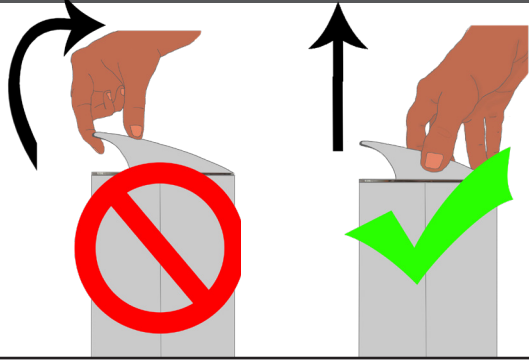

Compatibility

Make sure your version of Hextio is compatible with the directional airflow hood by checking the top grill. It should have the inserts pictured on the right.

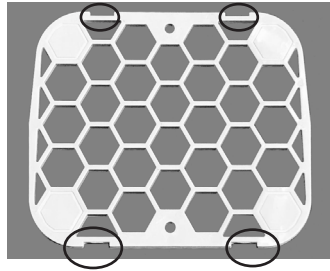


Directional airflow hood instructions

When using Hextio in a room larger than 20sq m, the directional airflow hood can be used to direct the airflow towards the user.



To remove, pull firmly from one side of the hood, do not pull from front

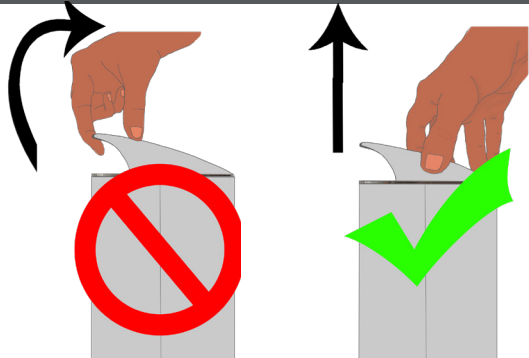

Compatibility

Make sure your version of Hextio is compatible with the directional airflow hood by checking the top grill. It should have the inserts pictured on the right.

